

Installation of Padlocking Kit

HC4 Diaphragm Valves


Padlocking facility can be supplied to order or is available in kit form for fitting to the bonnet sub assembly or whole valve.

Padlocking Kit Parts List

- 1 Padlocking handwheel
- 2 Padlocking collar (snap-fit)
- 3 Padlocking pin
- 4 Security lock-screw
- 5 Security lock-screw Key

Padlocking Assembly Instructions

- 1 Rotate handwheel anti-clockwise until valve is fully open.
- 2 Remove cover-cap, undo screw and remove handwheel.
- 3 Position locking collar over bonnet neck aligning 2 cut-outs at base of collar with ribs on bonnet.
- 4 Press collar downwards until top of collar is level with top of bonnet neck and collar 'snaps' into position.
- 5 Fit locking handwheel to spindle and secure with security lock-screw (key provided) and cover-cap.
- 6 Rotate handwheel to desired position. Insert locking pin through hole in handwheel to locate with groove on periphery of locking collar.
- 7 Fit padlock.

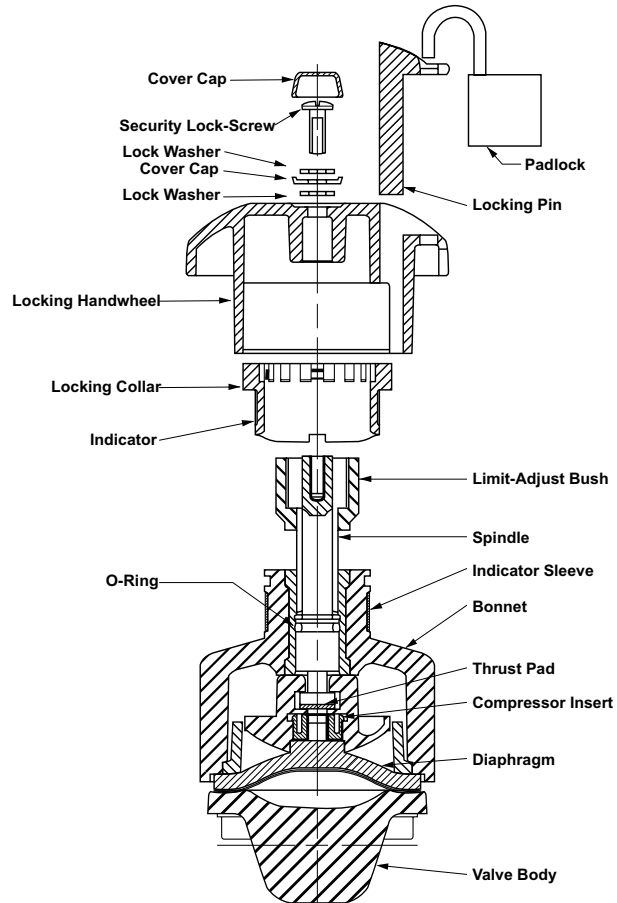

HC4/101/01/11.02